

Truck Gold Truck Silver Truck Powertrain Includes all Truck Powertrain coverage and... Includes all Truck Silver coverage and... **Engine / Diesel Engine Air Conditioning** Engine Engine Steering All internal lubricated parts: Flywheel/flex plate **Engine mounts** All internal lubricated parts: Accumulator Camshaft & cam bearings Water pump Clutch bearing Harmonic balancer & bolt Electric power steering motor Connecting rods & rod bearings Compressor Oil pan Main & intermediate steering Crankshaft & main bearings Compressor clutch Timing & valve covers shafts & couplings **Drive Axle** Cylinder heads Compressor seals Vacuum pump Manual & power steering All internal lubricated parts: Diesel fuel injectors Condenser gear housing CV joints Diesel injection pump Power steering pump Evaporator Turbo (Supercharger) ² Universal joints & wheel Engine block **Expansion valve** Steering column All internal parts: bearings Gears or chain Freon only in **Bearings** Lifters conjunction with a **Electrical / High Tech** Supercharger housing **Electrical** Main engine oil pump covered A/C repair Turbo charger housing Ignition management Alternator Pistons & piston rings Idler pulley Vanes controls: Front windshield wiper Push rods Receiver/drier Wastegate AIT sensor motor Rocker arms Camshaft & crank Power door lock Valves, valve springs & valve push rods Suspension **Transmission** sensors actuators Ball joints Coil pack(s) Power seat motors Transmission mounts **Transmission** Engine control module Coil & leaf spring Power window motors Transmission oil pan All internal lubricated parts: Control arms Ignition control module Starter motor & Radius arms & bushings Knock sensor Bell housing solenoid **Drive Axle** 0 Torque converter Spindle / knuckle MAF sensor Voltage regulator Axle shafts Transmission case Stabilizer bar bushings MAP sensor Double offset joints 0 O2 sensor & links **Fuel Delivery System** Differential cover Powertrain control Differential Diesel/gas fuel pump Drive axle housing 1 module **Cooling** All internal lubricated parts: Diesel/gas fuel injectors Drive shaft center bearings TPS sensor Electric radiator Differential housing Fuel pressure regulator Propeller shaft Transmission input/ Differential cover cooling fan motor Yokes output speed sensor Fan clutch 4WD locking hub Steering Keyless entry transmitter Heater core **Transfer Case** All internal parts of: & receiver Radiator All internal lubricated components in transfer case. **ABS** Steering gear box Power mirror motor & **Thermostat** Steering rack & pinion Accumulator motor switch Seals & Gaskets unit (short rack) Electronic control processor Power seat switch Rental Internal leaks of: Hydraulic pump Power window switch Up to 3 days Cylinder head gasket Isolation dump valve **Brakes** Windshield washer pumps Intake manifold gasket Motor assembly Calipers (front & rear) All other seals & gaskets only in conjunction Pressure modulator valve Master cylinder with a covered repair Wheel speed sensors Vacuum power assist **Diesel High Tech** booster FGT sensors Fluids & Filters / Diagnostics **Brakes** Wheel cylinders Any fluids & filters required for a covered Hydroboost power assist unit Fuel pressure sensor repair according to OEM specifications NOx sensors Reasonable diagnostic charges up to \$75

Rental

Up to 5 days

Turbo speed sensor

Waste gate sensor